


T6-T7-T8-T9 - 3GW

IN LINE PULL TYPE HAY RAKES

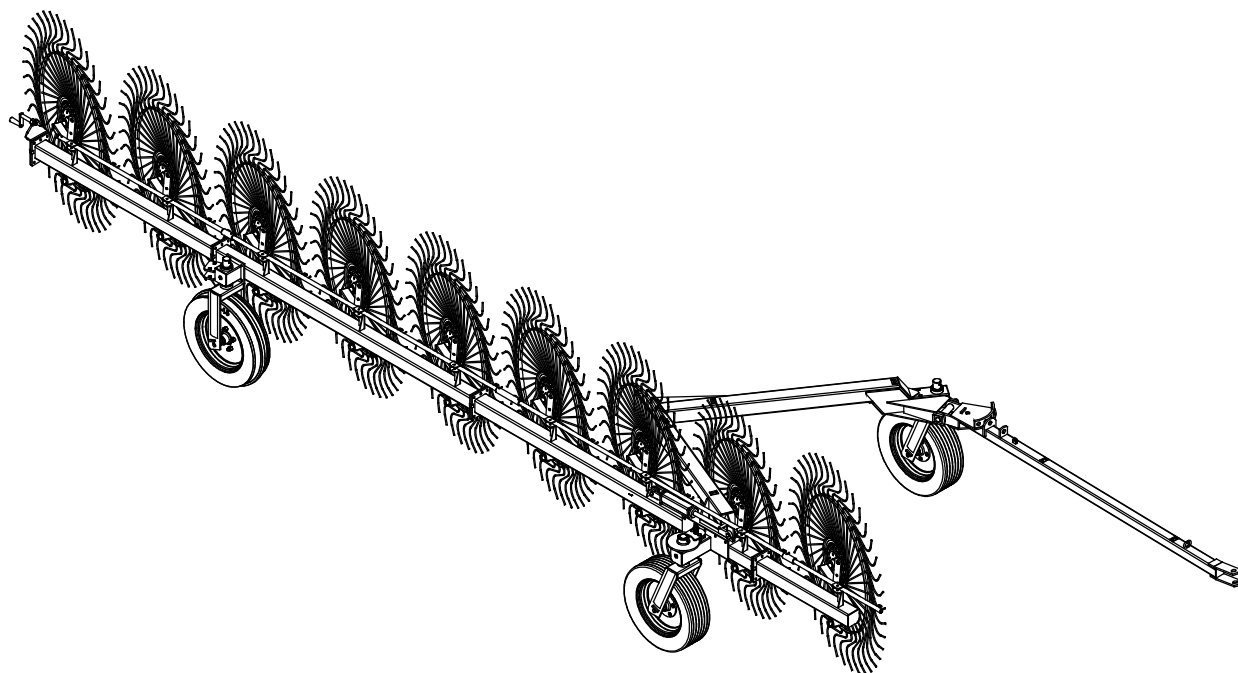

GB SPARE PARTS
IT PARTI DI RICAMBIO
DE ERSATZTEILE
FR PIÈCES DÉTACHÉES
ES PIEZAS DE REPUESTO

HAY RAKES
RANGHINATORI STELLARI
HEUHARKE
RÂTEAUX FANEURS
RASTRILLO DE HENO

Tonutti Italy

Via Gino Tonutti 3 - 33047
Remanzacco (UD) Italy
Tel. + 39 0432 667015
Fax + 39 0432 668282
info@tonutti.it
www.tonutti.it

Factories

Remanzacco (UD)
Rivignano (UD)
Vezzano (RE)
Krasnokamsk (RU)


Tonutti U.S.A.

Tonutti U.S.A.
1909 Thomas Road
Memphis, TN 38134
Phone (901) 385 8841
Fax (901) 385 8288
info@tonuttiusa.com
www.tonutti.com

Tonutti Russia

T. W. Limited
3 Tekhnicheskaya Street
Perm, 614070 Russia
Phone 007 (3422) 909096
Fax 007 (3422) 909096
twltd@perm.ru


MAIN FRAME T6-T7-T8-T9

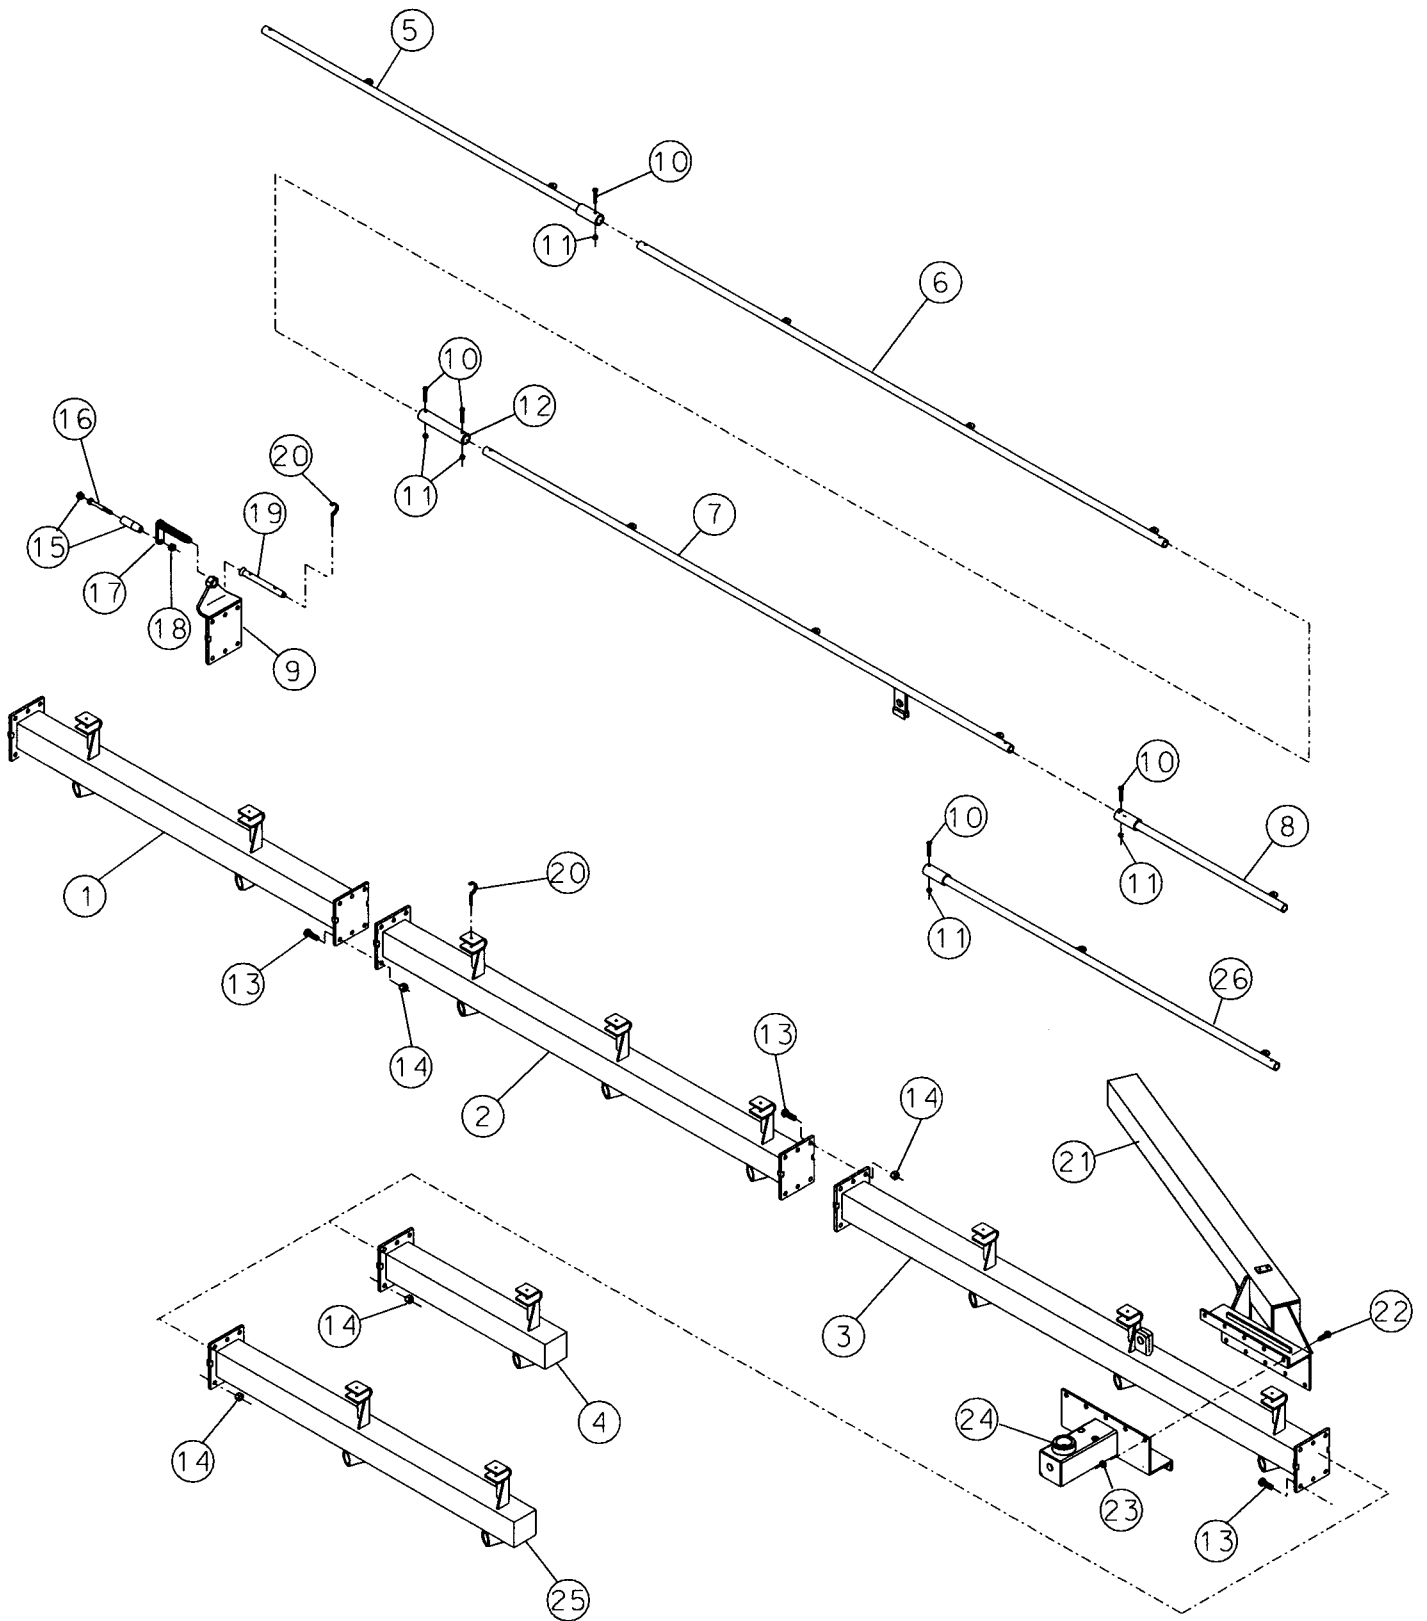

MAIN FRAME T6-T7-T8-T9

N#	CODE#	DESCRIPTION	Q.TY
1	P50AR058	FRAME 2 RAKE WHEEL l=1590 mod.98 T9	01
2	P50AR059	FRAME 3 RAKE WHEEL l=2270 mod.98 T9	01
3	P50AR060	FRAME 3 RAKE WHEEL l=2470 mod.98 T9	01
4	P50AR070	EXTENTION l=800 R.H. mod.98	01
5	P50GZ005	LIFT PIPE SHORT l=1530 ZINCED T/V	01
6	P50GZ014	LIFT PIPE LONG l=2400 ZINCED T/V	01
7	P50GZ009	PIPE (RH LIFT EXT)	01
8	P50GZ001	LIFT PIPE EXTEN. l=850 ZN	01
9	P50HR012	BRACKET LIFT WHEEL ADJ. ZN	01
10	V10AZ011	SCREW TE M8x50 UNI 5737 ZINCED	04
11	V20BZ001	SELF LOCKING NUT M8 UNI 7474 ZINC	04
12	P50GZ018	JOINT LIFT TUBE l=200	01
13	V10AZ101	HEX.CAP SCREW TE M12x35 UNI5739 ZN	24
14	V20CZ003	NUT METABLOCK M12 DIN 980 ZINCED	24
15	V80A0001	KNOB 1033/FP D=12 W/COVER	01
16	V10BZ003	SCREW TCEI M12x90 UNI 5931 ZINCED	01
17	P50QZ014	THREADED HANDLE ZN	01
18	V20AZ005	HEXAGONAL NUT 6S M12 UNI 5589 ZINC	01
19	S20AZ002	PIVOT SAFETY FOR PARKING	01
20	V45BZ001	PIN/LOCK d=8 l=60	10
21	P50BR098	ARM ATTACHMENT FRAME T	01
22	V10AZ100	SCREW TE M12x30 UNI 5739 ZINCED	10
23	V20CZ003	NUT METABLOCK M12 DIN 980 ZINCED	10
24	P50DR005	WHEEL SUPPORT SIDE T/96	01
25	P50AR066	EXTENTION L=1690 R.H.	01
26	P50GZ006	LIFT TUBE l=1665 ZN	01


DRAWBAR ASSEMBLY T6-T7-T8-T9

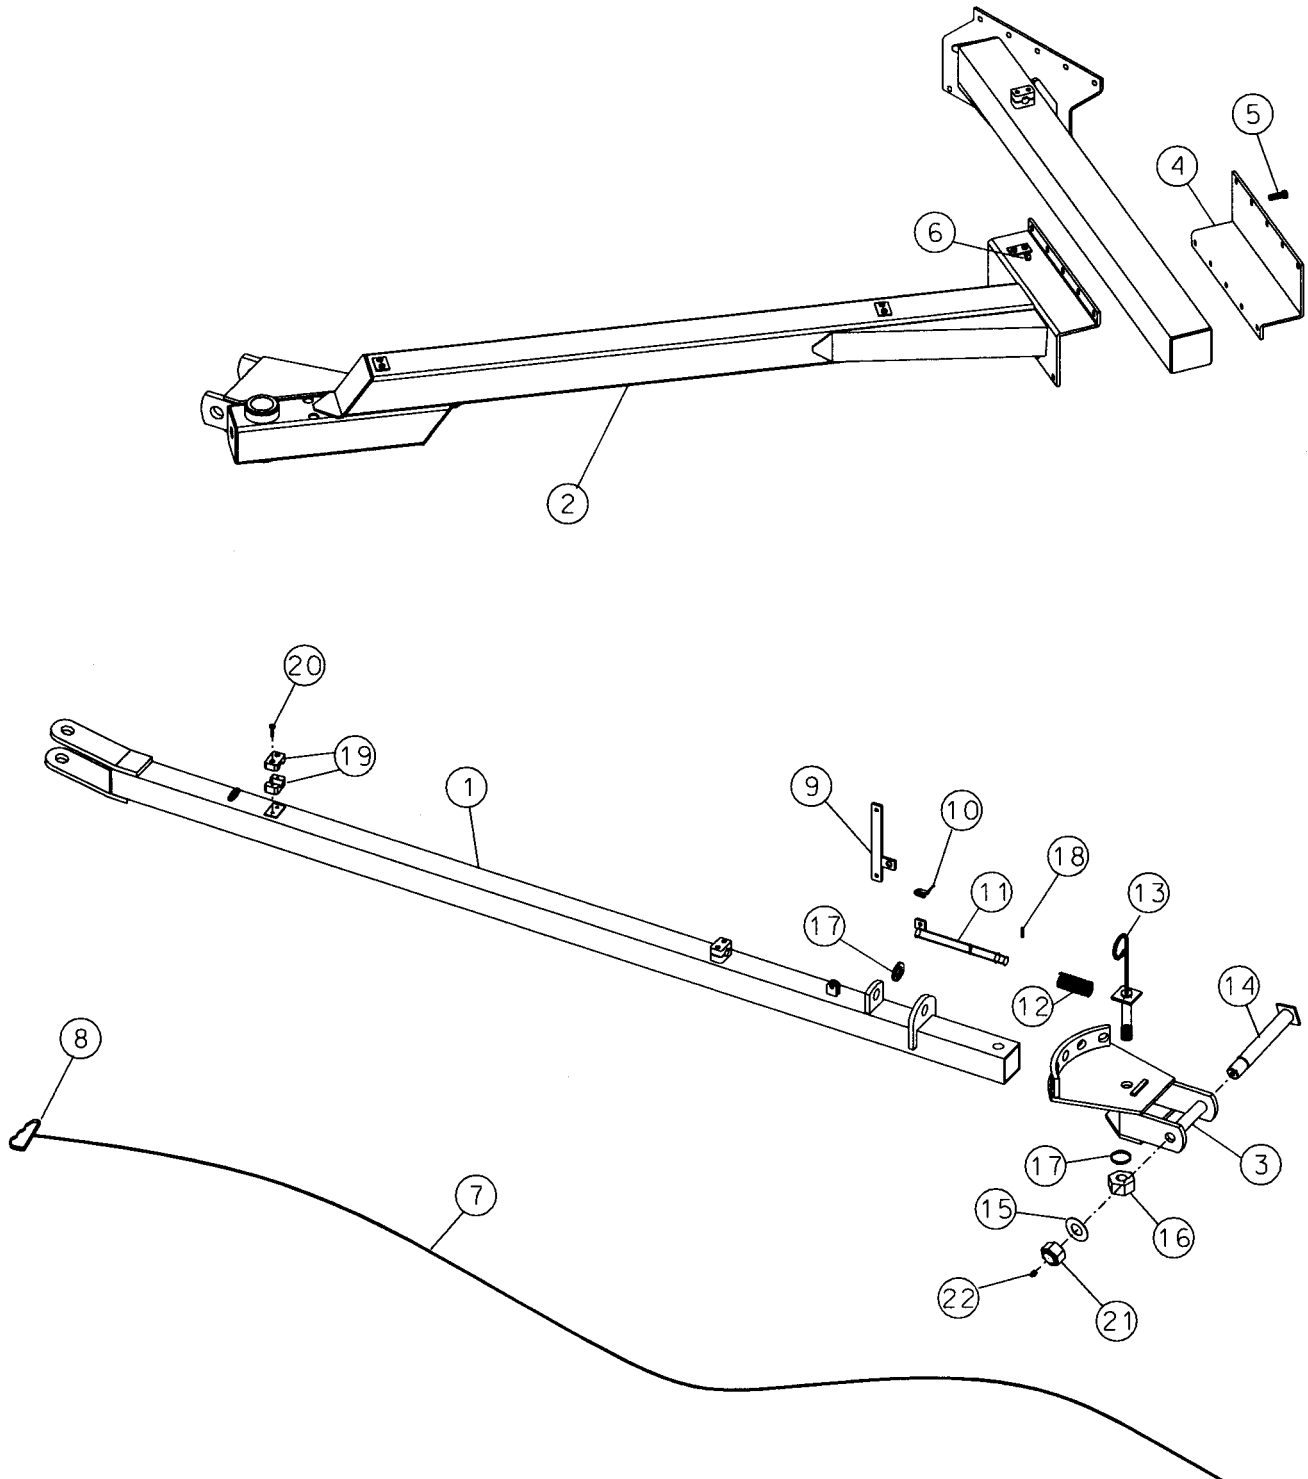

DRAWBAR ASSEMBLY T6-T7-T8-T9

N#	CODE#	DESCRIPTION	Q.TY
1	P50FR005	DRAWBAR l=2300 T9	01
2	P50BR097	ARM DRAWBAR ATTACHMENT T 2000	01
3	P50ZR125	PLATE ADJUSTMENT T2000	01
4	P50HR016	BRACKET SUPPORT REAR WHEEL T/96	01
5	V10AZ100	SCREW TE M12x30 UNI 5739 ZINCED	10
6	V20CZ003	NUT METABLOCK M12 DIN 980 ZINCED	10
7	C30DZ007	WIRE ROPE PLASTIFIED	01
8	V80A0002	HANDLE	01
9	C30BZ009	ROD LEVER ZINCED T9/94	01
10	V50AZ001	U SHACKLE 1/4" ZN	01
11	C70BZ019	PIN FOR SECTOR ZINCED T9/94	01
12	C40AZ002	SPRING ZINCED SECTOR DRAWBAR T6/94	01
13	P50ZZ037	PIN ATTACHMENT DRAWBAR	01
14	C70BZ060	PIVOT D=32 M 30 L=180 zn	01
15	V30B0015	WASHER/SPINDLE 31x61x3,5	01
16	V20BZ021	SELF LOCKING NUT NY.M24x2 UNI7474 Z	01
17	V30AZ014	WASHER 25x50x2.5 zn	02
18	V40CZ002	SPLIT PIN D=5x40 UNI 1336 ZINCED	01
19	V85B0001	CLAMP FOR 1 HOSE	12
20	V10BZ001	SCREW TCEI M6x25 UNI 5931 ZINCED	12
21	V20BZ015	SELF LOCKING NUT NYLON M30 UNI7473	01
22	V99AZ001	GREASER 10 MB	01


FRONT CRAZY WHEEL AND DIRECTIONAL WHEEL ASSEMBLY T6-T7-T8-T9

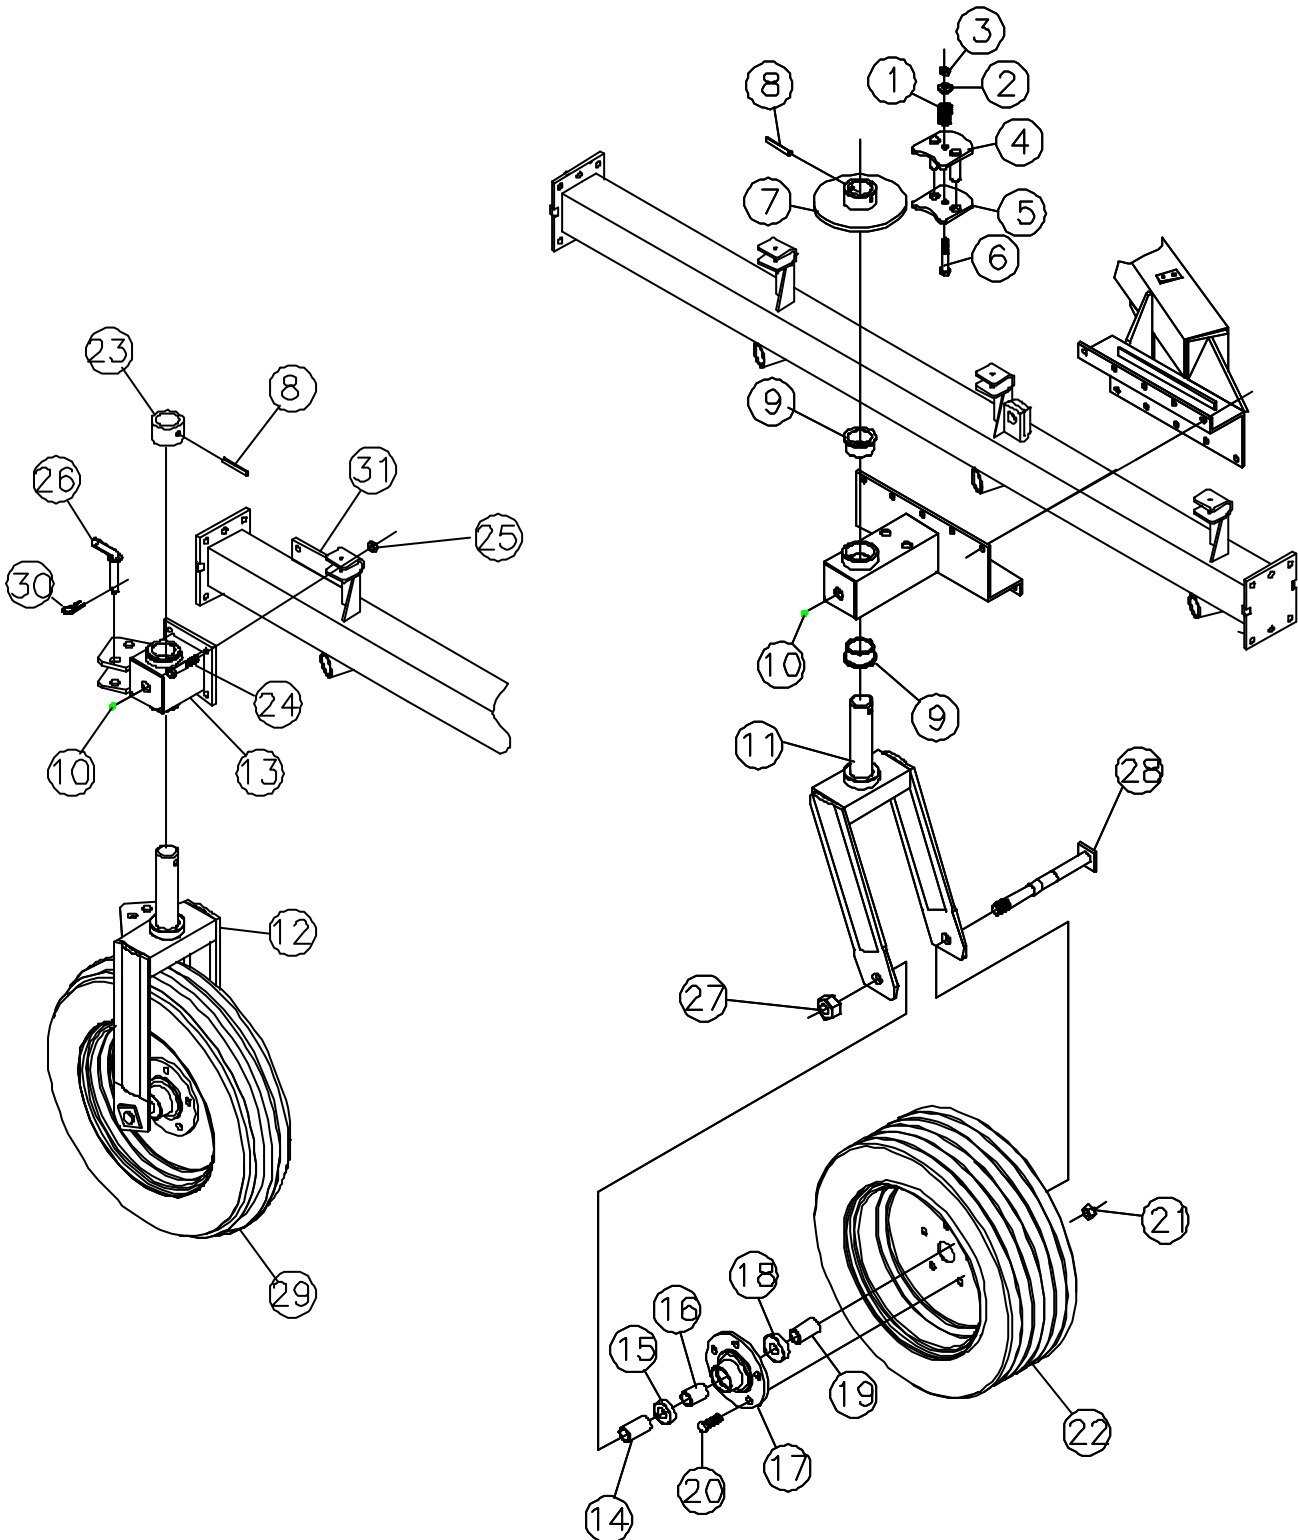

FRONT CRAZY WHEEL AND DIRECTIONAL WHEEL ASSEMBLY T6-T7-T8-T9

N#	CODE#	DESCRIPTION	Q.TY
1	C40AZ018	SPRING FOR BRAKE d=5 mm ZN	02
2	V30BZ004	WASHER 12x36x3 UNI 6593 ZINCED	02
3	V20CZ003	NUT METABLOCK M12 DIN 980 ZINCED	02
4	C80AZ002	PLATE BRAKES W/PIVOT ZN.	02
5	C80AZ001	PLATE FOR BRAKES ZN.	02
	S90E0001	BRAKE ASSEMBLY	02
6	V10AZ040	HEX.CAP SCREW TE M12x90 UNI5737 Z.	02
7	C80CZ001	DISC FOR BRAKES ZN.	02
8	V40B0010	ELASTIC PIN D. 10x70 UNI6873	03
9	S20B0001	BRASS BUSHING FOR WHEEL T9	06
10	V99AZ001	GREASER 10 MB UNI 7663-A	03
11	P50ER001	FORK FOR WHEEL 175/70x14"	02
12	P50ER004	FORK FOR WHEEL 175/70x14 T9/94	01
13	P50DR032	SUPPORT FORK WHEEL T9/94	01
14	V35AZ005	SPACER PIVOT G. WHEEL l=64	03
15	V60E0001	BUSHING (CUSC.)	03
16	V35A0003	SPACER INNER WHEEL L=48 T/V	03
17	S10AR003	HUB WHEEL SUPPORT T/V	03
18	V60E0004	BUSHING (CUSC.)	03
19	V35AZ006	SPACER PIVOT WHEEL EXT L=58	03
20	V10A0121	CAP SCREW MB 16x45	15
21	V20BZ025	SELF-CENTER NUT MB16x27x21	15
22	C60AS012	WHEEL 185/65 R14	02
	C60BS001	WHEEL 175.70x15" W/HUB	02
23	P50ZZ031	BUSHING H=45 ZINCED	01
24	V10AZ046	HEX.CAP SCREW TE M12x140 UNI 5737 Z	04
25	V20AZ004	HEXAGONAL NUT 6S M12 UNI 5588 ZN.	04
26	P50QZ012	PIN WHEEL ADJUSTMENT ZINCED T9	01
27	V20BZ021	SELF LOCKING NUT NY.M24x2 UNI7474 Z	01
28	C70BZ010	PIVOT GROUND WHEEL l=260 ZN	01
29	C60AS007	WHEEL 5.00x15" GREY	01
	C60BR011	WHEEL 5.00x15" W/HUB T9/96	01
30	V40CZ008	SPLIT PIN R d=4 ZINCED	01
31	P70AZ032	PLATE	01


RIGHT HAND FINGER WHEEL T6-T7-T8-T9

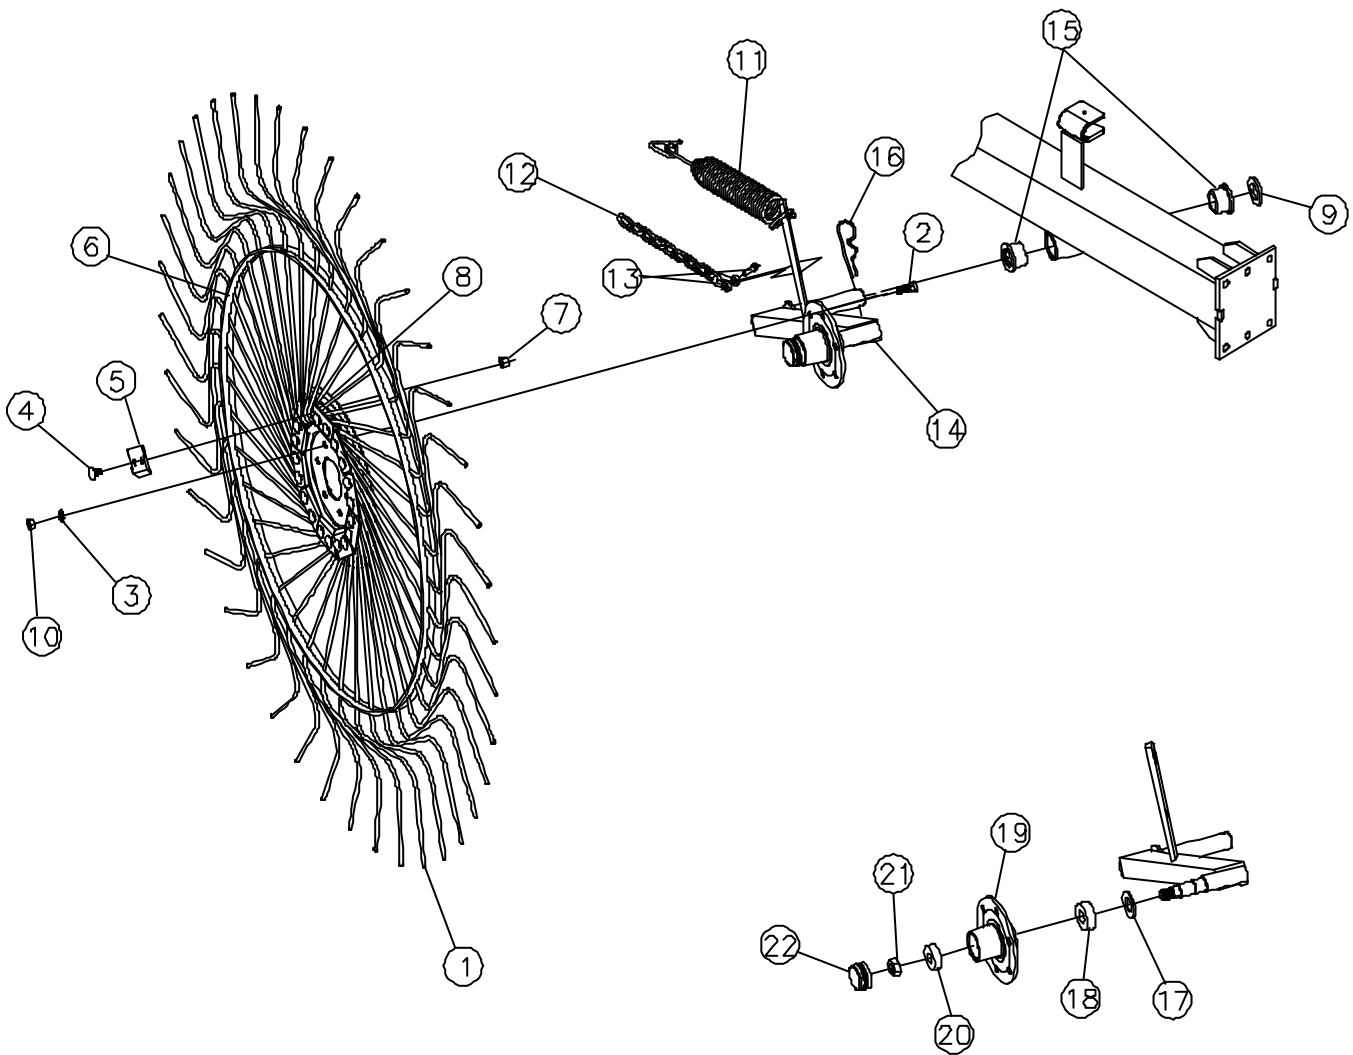

RIGHT HAND FINGER WHEEL T6-T7-T8-T9

N#	CODE#	DESCRIPTION	Q.TY
1	P25AG003	TINES STRAIGHT V.BUNDLE OF 40 TINES	01
2	V10AZ015	HEX SCREW TE M10x25	06
3	V30AZ004	WASHER M10 UNI6592 ZN	06
4	V10BZ006	SCREW TTQST M 10x21 UNI 5731 ZN	20
5	S10BZ001	CLIP TINE RAKE WHEELS ZN	10
6	P50ZG074	HOOP YELLOW	01
7	V20AZ003	HEXAGONAL NUT 6S M10 UNI 5588 ZINC	20
8	P70A0069	PLATE/TINE	01
9	V30BZ007	STEEL B. WASHER 32.2x53x5 ZN	01
10	V20AZ003	HEXAGONAL NUT 6S M10 UNI 5588 ZINC	06
11	C40AZ017	SPRING FOR RAKE ARMS ZN	01
12	C45AZ001	CHAIN ZINCED PCS 23x10,7x4,5 l=506	01
13	V50AZ001	U SHACKLE 1/4" ZN	01
14	P50BR003	RAKE ARM R.H.	01
	P50BR008	RAKE ARM R.H. W/GREASER	01
15	V85A0001	BUSHING NYLON	02
16	V40CZ009	SPLIT PIN R D=5 ZN	01
17	V30A0014	STEEL BLANK WASHER M24 UNI6592	01
18	V60D0001	BUSHING (CUSC.) 6205 Z	01
19	S10AR002	HUB FOR RAKE	01
	S10AR004	HUB W/GREASER	01
20	V60A0001	BUSHING (CUSC.)	01
21	V20BZ006	SELF LOCKING NUT NYLON MB18	01
22	S95AR001	CAP FOR HUB	01
23	P20BG001	RAKE WHEEL COMPLETE R.H. STR 6,4	09

HYDRAULIC LIFT MECHANISM T6-T7-T8-T9

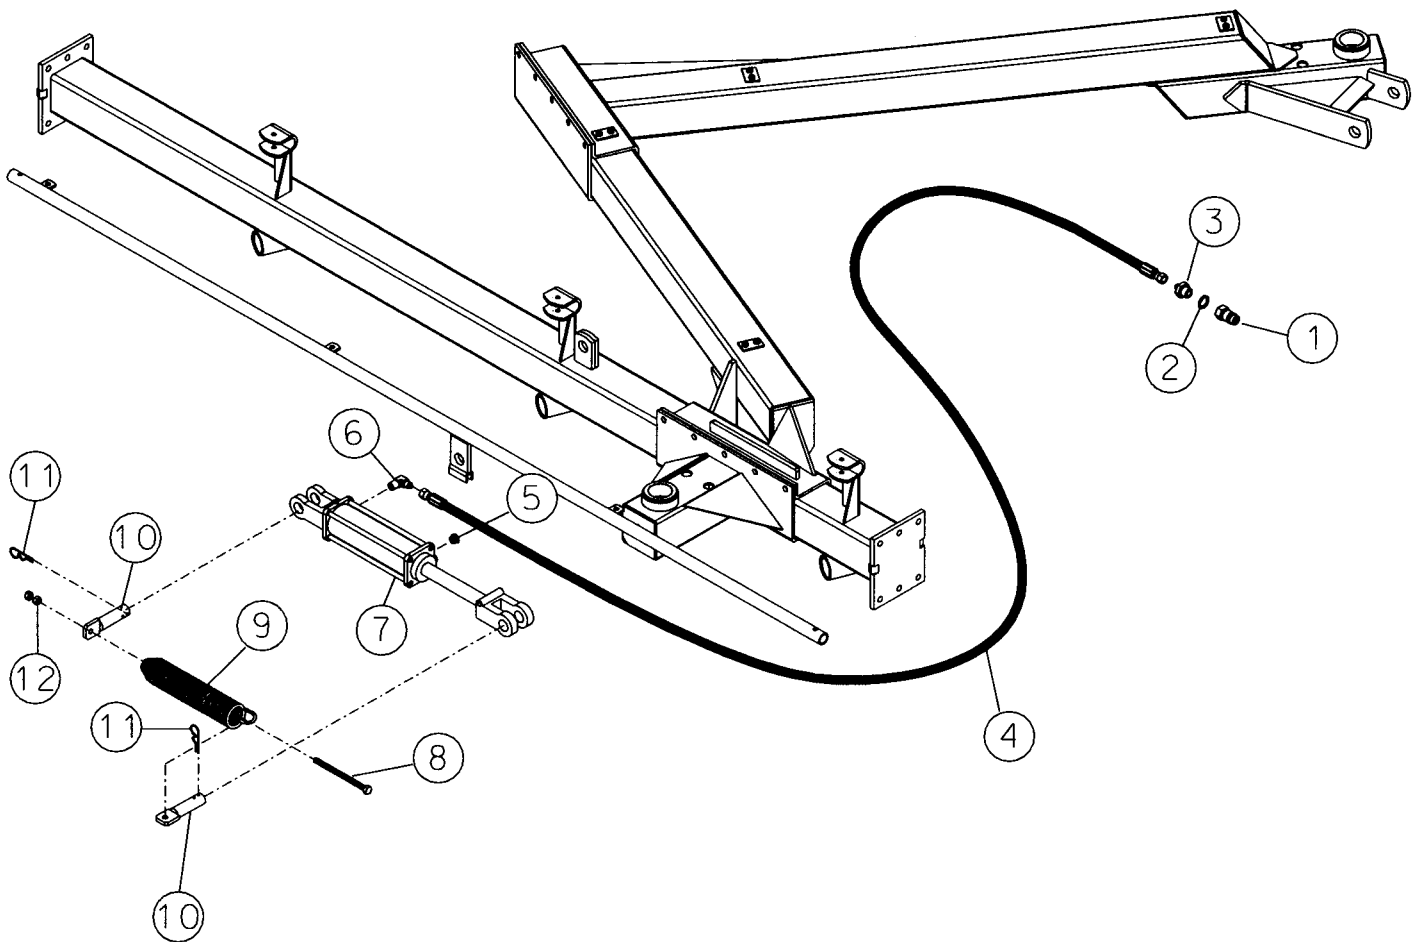

HYDRAULIC LIFT MECHANISM T6-T7-T8-T9

N#	CODE#	DESCRIPTION	Q.TY
1	C25E0001	FAST FLUID CONNECTOR 1/2" PIONEER	01
2	C25F0010	WASHER+OR 1/2" GAS CYL.	01
3	C25A0010	FITTING 1/2"x9/16" - 18 JIC	01
4	C22A0050	HOSE, HYD (100R-7200)	01
5	C25L0001	VALVE FOR CYLINDER 3/8"	01
6	C25A0004	90° ELBOW ADAPTER 3/8 NPTF-9/16-18	01
7	C50BN060	CYLINDER LIFT RAKE WHEELS V-2GW2x8"	01
8	C30BZ007	ROD FOR CYLINDER SPRING ZINCED T/V	01
9	C40AZ015	SPRING LIFT CYLINDER ZN T/V	01
10	C70BZ011	PIVOT/LIFT CYLINDER ZN T/V	02
11	V40CZ009	SPLIT PIN R D=5 ZN	02
12	V20AZ003	HEXAGONAL NUT 6S M10 UNI 5588 ZINC	02

SEALS SPARE PARTS CODES:

TO ORDER THE SEALS KIT REFER TO THE PRINTED SEALS CODE ON HYDRAULIC JACK STEEL CYLINDER.

IF NOT AVAILABLE (NOT PRINTED), ORDER C50A0101

NUMERICAL INDEX

PART N#	PAGE N#	REF N#	PART N#	PAGE N#	REF N#	PART N#	PAGE N#	REF N#
C22A0050	09	04	P50QZ012	05	26	V35A0003	05	16
C25A0004	09	06	P50QZ014	01	17	V35AZ005	05	14
C25A0010	09	03	P50ZG074	07	06	V35AZ006	05	19
C25E0001	09	01	P50ZR125	03	03	V40B0010	05	08
C25F0010	09	02	P50ZZ031	05	23	V40CZ002	03	18
C25L0001	09	05	P50ZZ037	03	13	V40CZ008	05	30
C30BZ007	09	08	P70A0069	07	08	V40CZ009	07	16
C30BZ009	03	09	S10AR002	07	19	V40CZ009	09	11
C30DZ007	03	07	S10AR003	05	17	V45BZ001	01	20
C40AZ002	03	12	S10AR004	07		V50AZ001	03	10
C40AZ015	09	09	S10BZ001	07	05	V50AZ001	07	13
C40AZ017	07	11	S20AZ002	01	19	V60A0001	07	20
C40AZ018	05	01	S20B0001	05	09	V60D0001	07	18
C45AZ001	07	12	S90E0001	05		V60E0001	05	15
C50BN060	09	07	S95AR001	07	22	V60E0004	05	18
C60AS001	05	22	V10A0121	05	20	V80A0001	01	15
C60AS007	05	29	V10AZ011	01	10	V80A0002	03	08
C60BR011	05		V10AZ015	07	02	V85A0001	07	15
C60BS001	05		V10AZ040	05	06	V85B0001	03	19
C70BZ010	05	28	V10AZ046	05	24	V99AZ001	05	10
C70BZ011	09	10	V10AZ100	01	22	V99AZ001	03	22
C70BZ019	03	11	V10AZ100	03	05			
C70BZ060	03	14	V10AZ101	01	13			
C80AZ001	05	05	V10BZ001	03	20			
C80AZ002	05	04	V10BZ003	01	16			
C80CZ001	05	07	V10BZ006	07	04			
P25AG003	07	01	V20AZ003	07	07			
P50AR058	01	01	V20AZ003	07	10			
P50AR059	01	02	V20AZ003	09	12			
P50AR060	01	03	V20AZ004	05	25			
P50AR070	01	04	V20AZ005	01	18			
P50BR003	07	14	V20BZ001	01	11			
P50BR008	07		V20BZ006	07	21			
P50BR097	03	02	V20BZ015	03	21			
P50BR098	01	21	V20BZ021	03	16			
P50DR005	01	24	V20BZ021	05	27			
P50DR032	05	13	V20BZ025	05	21			
P50ER001	05	11	V20CZ003	01	14			
P50ER004	05	12	V20CZ003	01	23			
P50FR005	03	01	V20CZ003	03	06			
P50GZ001	01	08	V20CZ003	05	03			
P50GZ005	01	05	V30A0014	07	17			
P50GZ009	01	07	V30AZ004	07	03			
P50GZ014	01	06	V30AZ014	03	17			
P50GZ018	01	12	V30B0015	03	15			
P50HR012	01	09	V30BZ004	05	02			
P50HR016	03	04	V30BZ007	07	09			

GB

When ordering spare parts or asking for technical information on your machine, please be sure to always mention the implement's serial numbers.

This is very important when ordering spare parts.

Always use only original Tonutti spare parts so as not to incur in any problems regarding the warranty policy for this implement.

IT

Quando ordinate le parti di ricambio o domandate informazioni tecniche riguardo la macchina, assicuratevi, per cortesia, di menzionare sempre i numeri di serie.

Questo è molto importante quando ordinate le parti di ricambio.

Utilizzate esclusivamente parti di ricambio originali Tonutti per non incorrere in nessun genere di problemi riguardanti la garanzia del prodotto.



33047 Remanzacco (UD) Italy - Via Gino Tonutti, 3
Tel. ++39 0432 667015 - Fax ++39 0432 668282